 

 

 
 
 

 

 






 









Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause [ /≡]	 Pause / Step / Freeze
 Stop/[≡+]	 Stop / Hold
 Rec/[≡◆]	 Rec / Rec Mode
 <</[≡o]	 << / Tune-
  <</[≡i]	  << / Preset-
 >> /[≡?]	 >>  / Preset+
 >>/[≡x]	 >> / Tune+
 Info	 Info / Angle
 O) /II/Audio	 Audio / Lang I/II
 [≡]	 Text / Goto
 ←/<x]	 Shift + Left
 1	 1
 2	 2
 3	 3

Original	Replacement
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 *	 Setup / OPT /
 0	 0
 [→]	 Shift + Right
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 Vol+	 Vol+





Original	Replacement	Original	Replacement
	Home/Source		Menu / Home
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	EPG		Guide / EPG / -/--
	List		Smart / List
	Q.Menu		D.Menu / Top

Original	Replacement	Original	Replacement


















 

 

 



Original	Replacement
Power	Power
Mute	Mute / Dimmer
Play	Play / Slow
Pause/[≡]	Pause / Step / Freeze
Stop/[≡+]	Stop / Hold
Rec/[≡◆]	Rec / Rec Mode
<</[≡o]	<< / Tune-
<</[≡i]	<< / Preset-
>> /[≡?]	>>  / Preset+
>>/[≡x]	>> / Tune+
Info	Info / Angle
OI/II/Audio	Audio / Lang I/II
[≡]	Text / Goto
←/<x]	Shift + Left
1	1
2	2
3	3

Original	Replacement
4	4
5	5
6	6
7	7
8	8
9	9
*	Setup / OPT /
0	0
[→]	Shift + Right
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Netflix	Shift + Red / Netflix /
You Tube	Shift + Yellow / YouTube /
Vol+	Vol+





Original	Replacement	Original	Replacement
 Home / Source	 Menu / Home		
 P+	 CH+ / Page+		
 Vol-	 Vol-		
 P-	 CH- / Page-		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 EPG	 Guide / EPG / -/--		
 List	 Smart / List		
 Q.Menu	 D.Menu / Top		

Original	Replacement

