



Original	Replacement
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Menu / Home
	0
	Exit / Cancel / Clear
	Up
	CH+ / Page+
	Vol-

Original	Replacement
	Left
	OK
	Vol+
	Right
	CH- / Page-
	Down
	Guide / EPG / -/--
	Red / Netflix / Search
	Text / Goto
	Blue / Prime Video / Random
	Audio / Lang I/II
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Subtitle / EQ
	Info / Angle
	Fav / Marker / PC
	TV/Radio /



Program



Original		Replacement	
VIDEO	Video	SHIFT + 4	Shift + 4
SCAN	Scan	RDS AV INPUT	AV / Input / RDS
RECORD	Record	REC MODE	Rec / Rec Mode
DEVICE	Device	LIST SMART	Smart / List
FILE	File	MEDIA DISPLAY	Display / Media
ZOOM	Zoom	SIZE ZOOM	Zoom / Size
PREV	Prev	PRESET-	I<< / Preset-
NEXT	Next	PRESET+	>>I / Preset+
ROLL	Roll	TITLE SOUND	Sound / Title
>>/<<	Play	SLOW	Play / Slow
>>/<<	Pause	STEP-FREEZE	Pause / Step / Freeze
<<	<<	TUNE-	<< / Tune-
>>	>>	TUNE+	>> / Tune+

Original		Replacement	

