

 

 







 
 
 

 
 



 


 

 

 

 



 
 
 
 
 
 
 
 


 
 
 
 
 


 
 
 
 





 


 
 
 

 




Original	Replacement	Original	Replacement
 Standby	 Power	 Aspect	 Format
 Mute	 Mute	 Info / Display	 Info
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 Ok
 6	 6	 Right	 Right
 7	 7	 Down	 Down
 8	 8	 Menu	 Menu
 9	 9	 Source	 AV
 0	 0	 Exit	 Exit
 -/--	 Shift + Guide	 Freeze	 Pause
 Recall	 Back	 P.Mode	 Shift + Format
 Vol+	 Vol +	 S.Mode	 Shift + Dual
 Vol-	 Vol -	 FAV	 Pre Ch
 Sleep	 Sleep	 EPG	 Guide





	Original	Replacement		Original	Replacement
	Subtitle	Subt			
	TV / Radio	TV/R			
	Audio I / II	Dual			
	Text	Text			
	Index	Smart			
	Mix	+  Shift + Text			
	Reveal	Media			
	Size	Eject			
	Subpage	+  Shift + Subt			
	Hold	Stop			
	Red	Red			
	Green	Green			
	Yellow	Yellow			
	Blue	Blue			

