




 

 


 














 

 




 





 

 



 


 
 





 






 

 
 












Original		Replacement		Original		Replacement	
	Power		Power		Down / CH -		CH- / Page-
	Mute		Mute / Dimmer		Down / CH -		Down
	1		1		Right / Vol +		Vol+
	2		2		Right / Vol +		Right
	3		3		Left / Vol -		Left
	4		4		Left / Vol -		Vol-
	5		5		OK		OK
	6		6		Menu		Menu / Home
	7		7		EPG / Guide		Guide / EPG / -/-
	8		8		Exit		Exit / Cancel / Clear
	9		9		USB - List		Smart / List
	FAV		Fav / Marker / PC		Page +		Shift + CH+ /
	0		0		Image - Aspect Ratio		Zoom / Size
	SOS		Sound / Title		Page -		Shift + CH- /
	i / Info		Info / Angle		USB - Media		Display / Media
	Up / CH +		Up		GOTO		Shift + Text /
	Up / CH +		CH+ / Page+		Image - HDMI RES		Picture / Format





Original	Replacement
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Timer	 Shift + Sleep / Timer
 Timer	 Sleep / Timer
 I<<	 I<< / Preset-
 <<	 << / Tune-
 >>	 >> / Tune+
 >>	 >>  / Preset+
 Red / Subt	 Subtitle / EQ
 Red / Subt	 Red / Netflix / Search
 Green / Lang	 Audio / Lang I/II
 Green / Lang	 Green / APP / Repeat
 Yellow / TV/Rad	 TV/Radio /
 Yellow / TV/Rad	 Yellow / YouTube / Repeat
 Blue / Txt	 Blue / Prime Video / Random

Original	Replacement
 Blue / Txt	 Text / Goto

