

 

 


 

 





 























 
 
 



 

















 



 




Original	Replacement
 POWER	 Power
 SOURCE	 AV
 EXIT	 Exit
 MENU	 Menu
 AUDIO	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Pre Ch
 MUTE	 Mute

Original	Replacement
 PIC MODE	 Shift + Format
 TEXT	 Text
 TV / RADIO	 TV/R
 OK	 Ok
 UP / CH+	 Up
 DOWN / CH-	 Down
 RIGHT	 Right
 LEFT	 Left
 PAGE UP	 Ch +
 PAGE DOWN	 Ch -
 VOL+	 Vol +
 VOL-	 Vol -
 SLEEP	 Sleep
 SUB.	 Subt
 RECALL	 Back
 RED	 Red
 GREEN	 Green





Original	Replacement	Original	Replacement
 YELLOW	 Yellow		
 BLUE	 Blue		
 STOP	 Stop		
 PAUSE	 Pause		
 REC	 Rec		
 REW	 <<		
 PLAY	 Play		
 FWD	 >>		
 SAT	 Smart		
 EPG	 Guide		
 HELP	 D. Menu		
 V. FORMAT	 Format		
 INFO	 Info		
 T / S	 List		
 POS.	 Media		

Original	Replacement

