
















 



 



 







 




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Sleep	 Sleep / Timer
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 I/II	 Audio / Lang I/II
 PR+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 Input	 AV / Input / RDS
 PR-	 CH- / Page-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Favourite	 Fav / Marker / PC
 FAV-	 Shift + CH- /
 FAV+	 Shift + CH+ /
 Info	 Info / Angle
 P-Mode	 Picture / Format
 S-Mode	 Sound / Title
 ARC	 Display / Media








































 

Original	Replacement	Original	Replacement
 EPG	 Guide / EPG / -/--		
 Text	 Text / Goto		
 Mix	 Shift + Text /		
 Size	 Zoom / Size		
 Reveal	 D.Menu / Top		
 Hold	 Stop / Hold		
 Index	 Smart / List		
 S.Page	 Eject / Surround		
 S.TITL	 Subtitle / EQ		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		











 


Original	Replacement	
Update	 + 	Shift + D.Menu / Top Menu
Aft/Caf	 + 	Shift + AV / Input / RDS
Reveal		Setup / OPT /
Off/Tim		Eject / Surround
Game Coo		Smart / List
2.Fav P/C 2.		Fav / Marker / PC
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--

Original	Replacement	
0/10		0
Menu audio		Audio / Lang I/II
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Color+ P.Std		Picture / Format
Color- S.Std		Sound / Title
Audio+	 + 	Shift + Vol+
Tune-		<< / Tune-
Tune+		>> / Tune+
Menu		Menu / Home
Mute		Mute / Dimmer
Info		Info / Angle
Subt.List		Subtitle / EQ
Txt Stop		Stop / Hold
Sleep Timer		Sleep / Timer





Original	Replacement	Original	Replacement
Return TV	 TV/RADIO	TV/Radio /	
Menu video	 D.MENU	D.Menu / Top	
Text	 TEXT	Text / Goto	
Txt Expand	 ZOOM	Zoom / Size	
TV/AV	 AV INPUT	AV / Input / RDS	
On/Off	 Power	Power	
Menu Up	 Up	Up	
Display	 DISPLAY	Display / Media	
Menu Left	 Left	Left	
OK Enter	 OK	OK	
Menu Right	 Right	Right	
Menu Off	 EXIT	Exit / Cancel / Clear	
Menu Down	 Down	Down	
Back	 BACK	Back / Return	
Volume+	 VOL+	Vol+	
Chan.Up	 CH PAGE	CH+ / Page+	
Volume-	 VOL-	Vol-	

Original	Replacement	Original	Replacement

