



| Original | Replacement | Original | Replacement |
|------------|-------------------|-------------|----------------------------|
| Power | Power | -/-- | Shift + Guide / EPG / -/-- |
| Mute | Mute / Dimmer | Jump | Smart / List |
| Source | AV / Input / RDS | Menu | Menu / Home |
| P.Mode | Picture / Format | Info | Info / Angle |
| S.Mode | Sound / Title | Sleep | Sleep / Timer |
| I/II/Audio | Audio / Lang I/II | Exit | Exit / Cancel / Clear |
| P.Size | Zoom / Size | Up | Up |
| 1 | 1 | Left | Left |
| 2 | 2 | Enter | OK |
| 3 | 3 | Right | Right |
| 4 | 4 | Down | Down |
| 5 | 5 | Vol+ | Vol+ |
| 6 | 6 | Vol- | Vol- |
| 7 | 7 | P- | CH- / Page- |
| 8 | 8 | P+ | CH+ / Page+ |
| 9 | 9 | Red/D.Setup | Red / Netflix / Search |
| 0 | 0 | Red/D.Setup | Setup / OPT / |





| Original | | Replacement | | Original | | Replacement | |
|----------|---------------|-------------|-----------------------------|----------|----------|-------------|--------------------|
| | Green/Repeat | | Green / APP / Repeat | | >> | | >> / Preset+ |
| | Yellow/Zoom | | Yellow / YouTube / Repeat | | DVD Menu | | D.Menu / Top |
| | Yellow/Zoom | | Shift + | | Text | | Text / Goto |
| | Blue/Goto | | Blue / Prime Video / Random | | Subtitle | | Subtitle / EQ |
| | Blue/Goto | | Shift + | | Guide | | Guide / EPG / -/-- |
| | [≡i]/FAV.CH | | Fav / Marker / PC | | | | |
| | [≡?]/Freeze | | Shift + | | | | |
| | [≡♦]/USB/SD | | Pause / Step / Step / | | | | |
| | [≡+]/Tv/Radio | | Shift + 8 | | | | |
| | Rec | | TV/Radio / | | | | |
| | Stop | | Rec / Rec Mode | | | | |
| | Open/Close | | Stop / Hold | | | | |
| | Play | | Eject / Surround | | | | |
| | Pause | | Play / Slow | | | | |
| | << | | Pause / Step / Freeze | | | | |
| | >> | | << / Tune- | | | | |
| | I<< | | >> / Tune+ | | | | |
| | | | I<< / Preset- | | | | |

