




Original	Replacement
 Power	 Power
 APP	 Shift + Green / APP /
 APP	 Display / Media
 List	 Smart / List
 EPG	 Guide / EPG / -/-
 i	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 CH+ / PG+	 CH+ / Page+
 Vol-	 Vol-
 CH- / PG-	 CH- / Page-
 Mute	 Mute / Dimmer
 Menu	 Menu / Home

Original	Replacement
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Options	 Setup / OPT /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS





Original		Replacement	
0	0	HDMI - BAT 0	0
TEXT	Text	GOTO TEXT	Text / Goto

Original		Replacement	

