




 


 
 




Original		Replacement		Original		Replacement	
	Power		Power		Up		Up
	Pause / Stop		Pause		Left / <<		Left
	Pause / Stop		Stop		Left / <<		<<
	l<<		l<<		Right / >>		Right
	>>l		>>l		Right / >>		>>
	CH +		Ch +		Play / Enter		Ok
	CH -		Ch -		Play / Enter		Play
	Vol +		Vol +		Down		Down
	Vol -		Vol -		[...]		Subt
	*		Smart		Open / Close		Eject
	Input		AV		Zoom		Shift + Eject
	TV / DVD Mode		TV/R		[ + ]		Info
	Mute		Mute		1		1
	Language		Dual		2		2
	DVD Menu		D. Menu		3		3
	DVD Menu		Menu		4		4
	Tools		Options		5		5





	Original	Replacement		Original	Replacement
	6	 6			
	7	 7			
	8	 8			
	9	 9			
	0	 0			
	--	 GUIDE			

