







 

 

 





 





 

 




 









Original	Replacement
	 Power
	 Display / Media
	 Mute / Dimmer
	 Pause / Step / Freeze
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Info / Angle
	 0
	 Back / Return
	 Red / Netflix / Search

Original	Replacement
	 Blue / Prime Video / Random
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Shift + Picture / Format
	 Audio / Lang I/II
	 Menu / Home
	 AV / Input / RDS
	 Exit / Cancel / Clear
	 Up
	 CH+ / Page+
	 Left
	 OK
	 Right
	 Down
	 Vol+
	 CH- / Page-
	 Vol-





Original		Replacement	
	Picture		Picture / Format
	Sound		Sound / Title
	Text		Text / Goto
	HDMI	+	Shift + 0
	VGA	+	Shift + 4
	Guide/Zoom		Zoom / Size
	Guide/Zoom		Guide / EPG / -/--
	Index/Subtitle		Subtitle / EQ
	Sleep/Hold		Sleep / Timer
	Sleep/Hold		Stop / Hold
	Lang/Cancel	+	Shift + Exit / Cancel / Clear
	Lang/Cancel	+	Shift + Audio / Lang I/II
	FAV/Sub.code		Fav / Marker / PC
	TV/Reveal		Smart / List
	Comp./Mix		Setup / OPT /

Original		Replacement	

