











 

 














Original	Replacement
 Open/Close	 Eject / Surround
 Power	 Power
 VCR	 Shift + 4
 DVD	 Shift + 2
 TV / VCR	 TV/Radio /
 TV / View	 Smart / List
 2	 2
 4	 4
 1 / Tracking -	 1
 5	 5
 3 / Tracking +	 3
 6	 6
 7	 7
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear
 0	 0

Original	Replacement
 P.Scan	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Setup	 Setup / OPT /
 Up	 Up
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 Edit	 Fav / Marker / PC
 Display	 Display / Media
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 <<	 << / Tune-














 

 







	Original	Replacement		Original	Replacement
	 >>	 >> / Tune+			
	 Stop	 Stop / Hold			
	 Rec	 Rec / Rec Mode			
	 Input	 AV / Input / RDS			
	 Subtitle	 Subtitle / EQ			
	 < / Slow -	 Vol-			
	 Slow + / >	 Vol+			
	 Copy	 Guide / EPG / -/--			
	 Angle	 Info / Angle			
	 Rec Speed	 Shift + Rec / Rec Mode			
	 Zoom	 Zoom / Size			
	 Repeat	 Green / APP / Repeat			
	 A-B	 Yellow / YouTube / Repeat			
	 Search	 Red / Netflix / Search			
	 Audio	 Audio / Lang I/II			
	 Title	 Sound / Title			
	 Timer	 Sleep / Timer			

	Original	Replacement		Original	Replacement





Original	Replacement
 Open/Close	 Eject / Surround
 Power	 Power
 VCR	 Shift + 4
 DVD	 Shift + 2
 TV / VCR	 TV/Radio /
 TV / View	 Smart / List
 2	 2
 4	 4
 1 / Tracking -	 1
 5	 5
 3 / Tracking +	 3
 6	 6
 7	 7
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear
 0	 0

Original	Replacement
 P.Scan	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Setup	 Setup / OPT /
 Up	 Up
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 Edit	 Fav / Marker / PC
 Display	 Display / Media
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 <<	 << / Tune-





Original		Replacement	
	>>		>> / Tune+
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Input		AV / Input / RDS
	Subtitle		Subtitle / EQ
	< / Slow -		Vol-
	Slow + / >		Vol+
	Copy		Guide / EPG / -/--
	Angle		Info / Angle
	Rec Speed	 + 	Shift + Rec / Rec Mode
	Zoom		Zoom / Size
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Search		Red / Netflix / Search
	Audio		Audio / Lang I/II
	Title		Sound / Title
	Timer		Sleep / Timer

Original		Replacement	

