


 








 





 

















 


 




 





 




 








Original	Replacement	Original	Replacement
 On	 Power	 Pause	 Pause
 Off	 Exit	 Stop	 Stop
 On Main	 Smart	 I<<	 I<<
 Off Main	 Media	 I>>	 I>>
 1	 1	 CD	 Yellow
 2	 2	 DVD	 Blue
 3	 3	 Tuner	 Green
 4	 4	 CD-R/Tape	 Text
 5	 5	 VCR	 AV
 6	 6	 V-AUX	 Red
 7	 7	 Phono	 D. Menu
 8	 8	 Preset Up	 Ch +
 9	 9	 Preset Down	 Ch -
 0	 0	 Vol+	 Vol +
 +10	 Guide	 Vol-	 Vol -
 Disc Skip+	 Pre Ch	 Muting	 Mute
 Play	 Play	 Shift/PTY	 Back





	Original	Replacement	Original	Replacement
	Menu			
	Status			
	RDS			
	Band			
	iPod			
	Up			
	Down			
	Right			
	Left			
	Enter			

