










 

 

 

 


















 
 







Original	Replacement
 Power	 Power
 <<	 << / Tune-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Wide	 Picture / Format
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow / ><	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 Menu	 Menu / Home
 9	 9
 0/AV	 AV / Input / RDS
 0/AV	 0
 i	 Info / Angle
 Up	 Up
 Cancel	 Shift + Exit / Cancel / Clear
 Left	 Left
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 OK	 OK
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Lang(AD)	 Audio / Lang I/II
 Subt.	 Subtitle / EQ
 FAV	 Fav / Marker / PC





	Original	Replacement	Original	Replacement
	Tv/Radio	 TV/Radio /		
	P+	 CH+ / Page+		
	Vol+	 Vol+		
	Guide	 Guide / EPG / -/--		
	Mute	 Mute / Dimmer		
	Text	 Text / Goto		
	P-	 CH- / Page-		
	Vol-	 Vol-		

