 

















 












Original	Replacement	Original	Replacement
 Standby	 Power	 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 Zoom/Aspect	 Shift + Zoom /
 2	 2	 Zoom/Aspect	 Picture / Format
 3	 3	 CH-	 CH- / Page-
 4	 4	 Menu	 Menu / Home
 5	 5	 Up	 Up
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Left	 Left
 8	 8	 OK/Enter	 OK
 9	 9	 Right	 Right
 Recall	 Back / Return	 Sleep	 Sleep / Timer
 0	 0	 Down	 Down
 List	 Smart / List	 Source	 AV / Input / RDS
 Vol+	 Vol+	 Red	 Red / Netflix / Search
 Info/Display	 Display / Media	 Green	 Green / APP / Repeat
 Info/Display	 Info / Angle	 Yellow	 Yellow / YouTube / Repeat





Original	Replacement	Original	Replacement
	Blue		Blue / Prime Video / Random
	TTX		Text / Goto
	Index		D.Menu / Top
	Hold		Shift + Stop /
	I/II/Audio		Audio / Lang I/II
	Repeat/Rec		Rec / Rec Mode
	Repeat/Rec		Shift + Green / APP /
	Stop/Reveal		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Size		Zoom / Size
	Subtitle		Subtitle / EQ
	<</Subpage		<< / Tune-
	>>		>> / Tune+
	Tv/Radio		TV/Radio /
	I<<		I<< / Preset-
	EPG		Guide / EPG / -/--
			>>I
			FAV
			>>I / Preset+
			Fav / Marker / PC

