

 

 

 

 



 



 



 










 
 







 



 

 

 

 



 



 













Original		Replacement		Original		Replacement	
	Power		Power		Vol +		Vol+
	Mute		Mute / Dimmer		MTS		Info / Angle
	1		1		CH +		CH+ / Page+
	2		2		Vol -		Vol-
	3		3		Aspect		Shift + Picture / Format
	4		4		CH -		CH- / Page-
	5		5		Guide		Guide / EPG / -/-
	6		6		Home		Shift + Menu / Home
	7		7		Rec		Rec / Rec Mode
	8		8		Menu		Menu / Home
	9		9		Up		Up
	List		Smart / List		Source		AV / Input / RDS
	0		0		Left		Left
	Recall		Back / Return		Enter		OK
	P.Mode		Picture / Format		Right		Right
	S.Mode		Sound / Title		Exit		Exit / Cancel / Clear
	Sleep		Sleep / Timer		Down		Down





Original	Replacement
Display	Display / Media
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
<< / Index	<< / Tune-
Play/Pause /	Pause / Step / Freeze
Play/Pause /	Shift + Exit / Cancel / Clear
Play/Pause /	Play / Slow
>> / TTX	>> / Tune+
>> / TTX	Text / Goto
I<< / SUB.PG	I<< / Preset-
>>I / Reveal	>>I / Preset+
Stop / Mix	Stop / Hold
CAP	D.Menu / Top
Subtitle	Subtitle / EQ
TV / Radio	TV/Radio /

Original	Replacement
FAV	Fav / Marker / PC
Size / Mouse	Zoom / Size
Hold / Refresh	Shift + Stop /



Program