











































































Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV/VCR	 Smart / List
 0	 0
 CM-Skip	 Display / Media
 REC / ITR	 Rec / Rec Mode
 Eject	 Eject / Surround
 Play	 Play / Slow
 << REW	 << / Tune-

Original	Replacement
 << REW	 I<< / Preset-
 >> F FWD	 >> / Tune+
 >> F FWD	 >>I / Preset+
 Pause/Still	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Left	 Left
 Up	 Up
 Right	 Right
 Down	 Down
 Clear	 Exit / Cancel / Clear
 OK / CLK / CNT	 OK
 i	 Info / Angle
 LP	 Text / Goto
 AV	 AV / Input / RDS
 C.Lock	 TV/Radio /










 


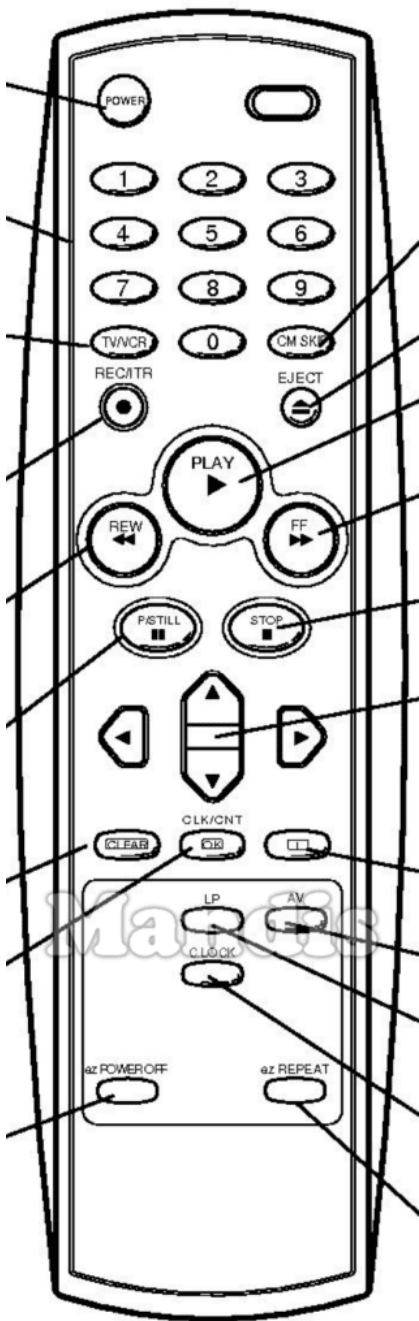

Original	Replacement	Original	Replacement
On/Off	 Power	Auto/Track	 D.Menu / Top
Audio Out	 Mute / Dimmer	T.Set/Clock	 Setup / OPT /
Play	 Play / Slow	Video/Go-To	 Text / Goto
Pause	 Pause / Step / Freeze	Input Source	 AV / Input / RDS
Stop	 Stop / Hold	Menu	 Menu / Home
Record	 Rec / Rec Mode	Menu Up	 Up
Rewind	 << / Tune-	Menu Left	 Left
F.Forward	 >> / Tune+	OK Enter	 OK
Prev.	 I<< / Preset-	Menu Right	 Right
Next	 >>I / Preset+	Exit	 Exit / Cancel / Clear
F.Adv	 Sound / Title	Menu Down	 Down
Audio	 Audio / Lang I/II	Slow/Dpss+	 Vol+
Case Tape	 Eject / Surround	VCR/TV	 Smart / List
Mon/TV	 Picture / Format	Tracking+	 CH+ / Page+
Sp/Lp/Speed	 Zoom / Size	Slow/Dpss-	 Vol-
Timer/Sleep	 Sleep / Timer	Display	 Display / Media
Progr/C/CH	 TV/Radio /	Tracking-	 CH- / Page-

Original	Replacement	Original	Replacement
On/Off	 Power	Auto/Track	 D.Menu / Top
Audio Out	 Mute / Dimmer	T.Set/Clock	 Setup / OPT /
Play	 Play / Slow	Video/Go-To	 Text / Goto
Pause	 Pause / Step / Freeze	Input Source	 AV / Input / RDS
Stop	 Stop / Hold	Menu	 Menu / Home
Record	 Rec / Rec Mode	Menu Up	 Up
Rewind	 << / Tune-	Menu Left	 Left
F.Forward	 >> / Tune+	OK Enter	 OK
Prev.	 I<< / Preset-	Menu Right	 Right
Next	 >>I / Preset+	Exit	 Exit / Cancel / Clear
F.Adv	 Sound / Title	Menu Down	 Down
Audio	 Audio / Lang I/II	Slow/Dpss+	 Vol+
Case Tape	 Eject / Surround	VCR/TV	 Smart / List
Mon/TV	 Picture / Format	Tracking+	 CH+ / Page+
Sp/Lp/Speed	 Zoom / Size	Slow/Dpss-	 Vol-
Timer/Sleep	 Sleep / Timer	Display	 Display / Media
Progr/C/CH	 TV/Radio /	Tracking-	 CH- / Page-












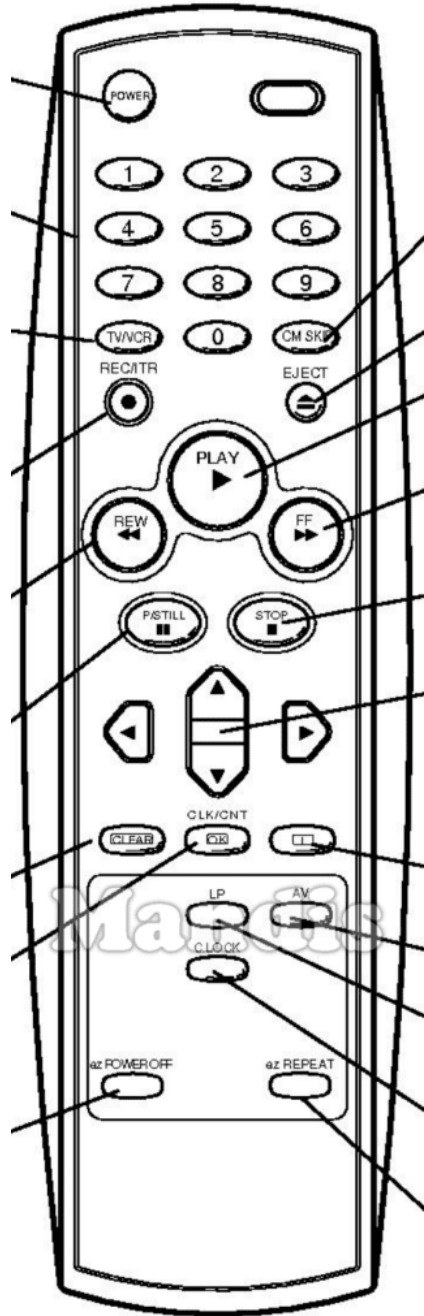



















Original	Replacement	
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
-/--		Guide / EPG / -/--
0		0
Ch.Memo		Fav / Marker / PC
Repeat		Green / APP / Repeat
Slow Down		Shift + Play /
Clear 00:00		Shift + Exit / Cancel / Clear
Index Pict+		Shift + CH+ /
Index Pict-		Shift + CH- /

Original	Replacement












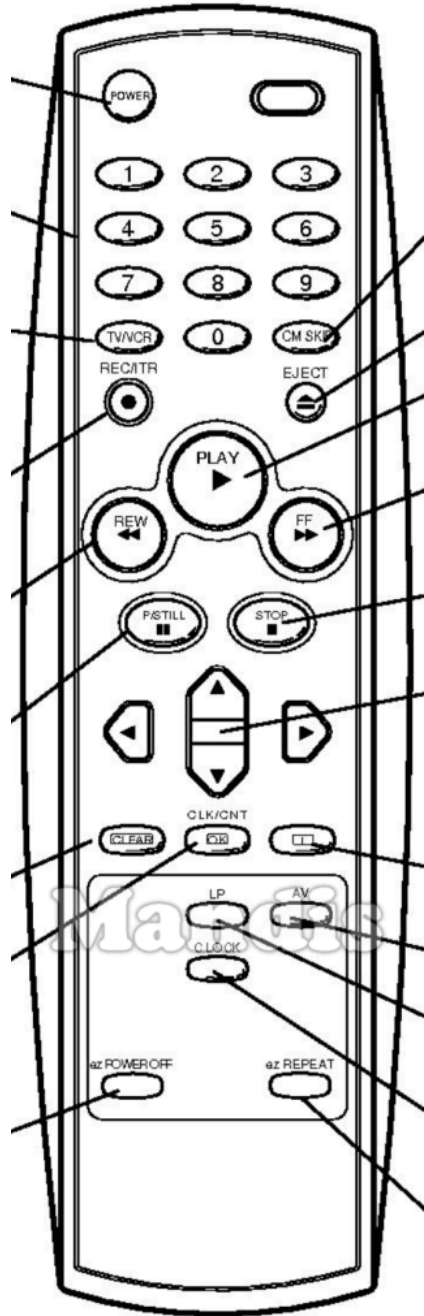






















 
 

 
Original	Replacement	Replacement
On/Off		Power
Audio Out		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
Audio Dub		Sound / Title
Audio		Audio / Lang I/II
Rec/Mode		Subtitle / EQ
Eject/Reverse		Eject / Surround
Mon/TV		Picture / Format
Sp/Lp/Speed		Zoom / Size
Timer/Record		Sleep / Timer

Original	Replacement	Replacement
Progr/C/CH		TV/Radio /
Auto/Track		D.Menu / Top
T.Set/Clock		Setup / OPT /
Video/Go-To		Text / Goto
Input Source		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Show View		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
F.Adv		Back / Return
Slow/Dpss+		Vol+
VCR/TV		Smart / List
Chan+		CH+ / Page+





Original	Replacement	
Slow/Dpss-	 Vol-	
Display	 Display / Media	
Chan-	 CH- / Page-	
1	 1	
2	 2	
3	 3	
4	 4	
5	 5	
6	 6	
7	 7	
8	 8	
9	 9	
-/--	 Guide / EPG / -/--	
0	 0	
Ch.Memo	 Fav / Marker / PC	
Counter Clock	 Red / Netflix / Search	
Count Remain	 Green / APP / Repeat	

Original	Replacement	
Counter Stop	 Yellow / YouTube / Repeat	
Counter Reset	 Blue / Prime Video / Random	
Slow Down	 Shift + Play /	
Rec. On/Off	 Shift + Rec / Rec Mode	
X2 Rew/Play	 Shift + << /	
Frame Down	 Shift + I<< / Preset-	
Frame Up	 Shift + >>I / Preset+	
Index Pict+	 Shift + Up	
Set-	 Shift + Left	
Set+	 Shift + Right	
Index Pict-	 Shift + Down	
Otr/A.Otr	 Shift + Smart / List	
Tracking+	 Shift + CH+ /	
Vps/Pdc	 Shift + Display / Media	
Tracking-	 Shift + CH- /	
Search Index	 Shift + Red / Netflix /	

