

 



 





 

 


 




 



 



 





 









 


















Original	Replacement	Original	Replacement
 Standby	 Power	 Right	 Right
 Info	 Info / Angle	 Vol+	 Vol+
 Subtitle	 Subtitle / EQ	 Record	 Rec / Rec Mode
 Mute	 Mute / Dimmer	 CH-	 CH- / Page-
 I<<	 I<< / Preset-	 Down	 Down
 Play	 Play / Slow	 Stop	 Stop / Hold
 <<	 << / Tune-	 1	 1
 >>I	 >>I / Preset+	 2	 2
 Pause	 Pause / Step / Freeze	 3	 3
 >>	 >> / Tune+	 EPG	 Guide / EPG / -/-
 Menu	 Menu / Home	 4	 4
 Up	 Up	 5	 5
 CH+	 CH+ / Page+	 6	 6
 Exit	 Exit / Cancel / Clear	 Back	 Back / Return
 Vol-	 Vol-	 7	 7
 Left	 Left	 8	 8
 OK	 OK	 9	 9





 




 
Original	Replacement
	 0
	 Display / Media
	 Shift + 8
	 TV/Radio /
	 Audio / Lang I/II
	 Text / Goto
	 Sleep / Timer
	 Fav / Marker / PC
	 Smart / List
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random

Original	Replacement





Original	Replacement
 Standby	 Power
 Info	 Info / Angle
 Subtitle	 Subtitle / EQ
 Mute	 Mute / Dimmer
 I<<	 I<< / Preset-
 Play	 Play / Slow
 <<	 << / Tune-
 >>I	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Menu	 Menu / Home
 Up / CH+	 CH+ / Page+
 Up / CH+	 Up
 Exit	 Exit / Cancel / Clear
 Left / Vol-	 Vol-
 Left / Vol-	 Left
 OK	 OK

Original	Replacement
 Right / Vol+	 Vol+
 Right / Vol+	 Right
 Record	 Rec / Rec Mode
 Down / CH-	 Down
 Down / CH-	 CH- / Page-
 Stop	 Stop / Hold
 1	 1
 2	 2
 3	 3
 EPG	 Guide / EPG / -/-
 4	 4
 5	 5
 6	 6
 Back	 Back / Return
 7	 7
 8	 8
 9	 9





Original	Replacement
0	0
Media	Display / Media
USB	Shift + 8
TV / Radio	TV/Radio /
Audio	Audio / Lang I/II
TTX	Text / Goto
Timer	Sleep / Timer
Fav	Fav / Marker / PC
Res.	Smart / List
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Replacement

