











 

 

 

 

 











 





 

 

 

 

 

 

 

 

 



 




 








Original	Replacement	Original	Replacement
 Power	 Power	 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer	 CH+	 CH+ / Page+
 1	 1	 Up	 Up
 2	 2	 CH-	 CH- / Page-
 3	 3	 Down	 Down
 4	 4	 Vol-	 Vol-
 5	 5	 Left	 Left
 6	 6	 Vol+	 Vol+
 7	 7	 Right	 Right
 8	 8	 OK	 OK
 9	 9	 I<	 I<< / Preset-
 0	 0	 >I	 >>I / Preset+
 T1/T2	 Smart / List	 <<	 << / Tune-
 FAV	 Fav / Marker / PC	 >>	 >> / Tune+
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 EPG	 Guide / EPG / -/--	 Rec	 Rec / Rec Mode
 Info	 Info / Angle	 Blue	 Blue / Prime Video / Random





Original	Replacement
 Stop	 Stop / Hold
 TXT	 Text / Goto
 Green	 Green / APP / Repeat
 Tv/Radio	 TV/Radio /
 Play	 Play / Slow
 Yellow	 Yellow / YouTube / Repeat
 Pause	 Pause / Step / Freeze
 Audio	 Audio / Lang I/II
 SUB	 Subtitle / EQ
 Zoom	 Zoom / Size
 Device	 AV / Input / RDS

Original	Replacement

