




| Original | Replacement | Original | Replacement |
|----------------------------|--|---------------|---|
| Audio |  Audio / Lang I/II | PRG |  TV/Radio / |
| AFFICHE |  Power | CLR - EFF |  Exit / Cancel / Clear |
| Open / Close - OUVRE-FERME |  Eject / Surround | Up |  Up |
| Angle |  Info / Angle | Left |  Left |
| 1 |  1 | OK |  OK |
| Subtitle - SOUS TITRE |  Subtitle / EQ | Title - TITRE |  Sound / Title |
| Search - |  Red / Netflix / Search | Right |  Right |
| 2 |  2 | Down |  Down |
| 3 |  3 | Vol+ |  Vol+ |
| 4 |  4 | MODE |  Smart / List |
| 5 |  5 | Vol- |  Vol- |
| 6 |  6 | ZOOM |  Zoom / Size |
| 7 |  7 | A-B |  Yellow / YouTube / Repeat |
| 8 |  8 | STOP |  Stop / Hold |
| 9 |  9 | MARK - |  Fav / Marker / PC |
| 0 |  0 | Return - |  Back / Return |
| Menu |  Menu / Home | Setup - REGL |  Setup / OPT / |





| Original | Replacement | |
|------------------|---|-----------------------|
| F.Rwd - AR.RAPID |  | << / Tune- |
| F.Fwd - AV.RAPID |  | >> / Tune+ |
| Mute - |  | Mute / Dimmer |
| Slow R - |  | CH- / Page- |
| Slow F - |  | CH+ / Page+ |
| Skip+ / SAUT+ |  | >>I / Preset+ |
| Skip- / SAUT- |  | I<< / Preset- |
| PAUSE/IMAGE |  | Pause / Step / Freeze |
| Play - LECTURE |  | Play / Slow |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

