



 

 
 
 





 

 
 
 


 


 


 



 
 



 
 





 









 



 



 










Original	Replacement	Original	Replacement
 Standby	 Power	 Left	 Left
 Mute	 Mute	 OK	 Ok
 P/N	 Smart	 CH+	 Ch +
 Open/Close	 Eject	 CH-	 Ch -
 <<<	 <<<	 Vol+	 Vol +
 >>>	 >>>	 Vol-	 Vol -
 Play/Pause	 Play	 Slow	 Back
 Stop	 Stop	 Goto	 Media
 I<<<	 I<<<	 1	 1
 >>>I	 >>>I	 2	 2
 Setup	 Options	 3	 3
 Source	 AV	 4	 4
 Info	 Info	 5	 5
 Return/Exit	 Exit	 6	 6
 Up	 Up	 7	 7
 Down	 Down	 8	 8
 Right	 Right	 9	 9





Original		Replacement		Original		Replacement	
	0		0				
	Program		Sleep				
	Title/TTX		Text				
	Audio		Dual				
	Subtitle		Subt				
	Red/Repeat		Red				
	Green/A-B		Green				
	Yellow/Menu		Yellow				
	Blue/Angle		Blue				
	EPG		Guide				
	Favorite		Pre Ch				
	Tv/Radio		TV/R				
	Zoom		Shift + Eject				

