 

















 























 

 

 





 





 

 














 

 





















Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/CL		AV / Input / RDS
	Zoom		Zoom / Size
	[...]/Subtitle		Subtitle / EQ
	Audio/Language		Audio / Lang I/II
	◀/Camera	 + 	Shift + Info / Angle
	?		Setup / OPT /
	ECO		Display / Media
	CEC		Smart / List
	Mute		Mute / Dimmer
	i		Info / Angle
	Z/Back		Back / Return
	PR+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	PR-		CH- / Page-
	TVG/Top Menu		Guide / EPG / -/--
	TVG/Top Menu		D.Menu / Top
	TXT/Menu		Text / Goto

 

















 
























 



 





 





 













Original	Replacement	Original	Replacement
 TXT/Menu	 Menu / Home		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 [ <> ]	 Shift + Zoom /		
 Rec/ >	 Rec / Rec Mode		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
  <	  << / Preset-		
 >	 >>  / Preset+		
 <<	 << / Tune-		
 >>	 >> / Tune+		









 

 





















Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/CL		AV / Input / RDS
	Zoom		Zoom / Size
	[...]/Subtitle		Subtitle / EQ
	Audio/Language		Audio / Lang I/II
	◀/Camera	 + 	Shift + Info / Angle
	?		Setup / OPT /
	ECO		Display / Media
	CEC		Smart / List
	Mute		Mute / Dimmer
	i		Info / Angle
	Z/Back		Back / Return
	PR+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	PR-		CH- / Page-
	TVG/Top Menu		Guide / EPG / -/--
	TVG/Top Menu		D.Menu / Top
	TXT/Menu		Menu / Home





Original	Replacement	Original	Replacement
	TXT/Menu		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/l>		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<		<< / Preset-
	>		>>  / Preset+
	<<		<< / Tune-
	>>		>> / Tune+





Original	Replacement
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	AV / Input / RDS
	Zoom / Size
	Subtitle / EQ
	Audio / Lang I/II
	+  Shift + Info / Angle
	Setup / OPT /

Original	Replacement
	Display / Media
	Smart / List
	Mute / Dimmer
	Info / Angle
	Back / Return
	CH+ / Page+
	Up
	Vol-
	Left
	OK
	Right
	Vol+
	Down
	CH- / Page-
	Guide / EPG / -/--
	D.Menu / Top
	Text / Goto



 





















 



 















 



 






 
 

 














Original	Replacement
	Menu / Home
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Shift + Zoom /
	Rec / Rec Mode
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	I<< / Preset-
	>>I / Preset+
	<< / Tune-
	>> / Tune+

Original	Replacement




 






 



 



 













Original		Replacement		Original		Replacement	
	Power		Power		ECO		Display / Media
	1		1		CEC		Smart / List
	2		2		Mute		Mute / Dimmer
	3		3		i		Info / Angle
	4		4		Z/Back		Back / Return
	5		5		PR+		CH+ / Page+
	6		6		Up		Up
	7		7		Vol-		Vol-
	8		8		Left		Left
	9		9		OK		OK
	0		0		Right		Right
	AV/CL		AV / Input / RDS		Vol+		Vol+
	Zoom		Zoom / Size		Down		Down
	[...]/Subtitle		Subtitle / EQ		PR-		CH- / Page-
	Audio/Language		Audio / Lang I/II		TVG/Top Menu		Guide / EPG / -/--
	◀/Camera	 + 	Shift + Info / Angle		TVG/Top Menu		D.Menu / Top
	?		Setup / OPT /		TXT/Menu		Text / Goto





Original	Replacement	Original	Replacement
 TXT/Menu	 Menu / Home		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 [ <> ]	 Shift + Zoom /		
 Rec/l>	 Rec / Rec Mode		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
  <	  << / Preset-		
 >	 >>  / Preset+		
 <<	 << / Tune-		
 >>	 >> / Tune+		

