 



 
 
 
 
 
 
 
 
 
 
 
 

 
 
 
 

 
 




Original	Replacement
	Mute
	Power
	PP
	I / II
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	--
	P<P
	Menu

Original	Replacement
	Info
	Left
	P +
	P +
	Right
	P -
	P -
	Vol -
	Vol +
	Red / Sound
	Green / Picture
	Yellow / Feature
	Blue / Install
	TV
	AV
	Text
	Mix



