



















Original	Replacement
 Power	 Power
 Tv/AV	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Back	 Back / Return
 Vol+	 Vol+
 Scan	 Smart / List
 P+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 Zoom	 Zoom / Size
 P-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK/Select	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Mute	 Mute / Dimmer
 Red / Picture	 Red / Netflix / Search
 Red / Picture	 Picture / Format
 Green / Sound	 Green / APP / Repeat
 Green / Sound	 Sound / Title
 Yellow / Sleep	 Yellow / YouTube / Repeat
 Yellow / Sleep	 Sleep / Timer
 Blue / Call	 Blue / Prime Video / Random





Original	Replacement
Text	Text / Goto
Mix	Shift + Text /
Size	Shift + Zoom /
Index	Rec / Rec Mode
Hold	Stop / Hold
Reveal	Play / Slow
Subpage	Subtitle / EQ
Cancel	Exit / Cancel / Clear
DVB Menu	D.Menu / Top
i	Info / Angle
EPG	Guide / EPG / -/--
ESC	Fav / Marker / PC
DVB	Display / Media
Freeze	Pause / Step / Freeze
I/II	Audio / Lang I/II

Original	Replacement

