



 



 

 



 

 

 

 



 

 

 

 

















 









 



 

 

 





| Original | Replacement | Original | Replacement |
|---|--|--|--|
|  Power |  Power |  Vol- |  Vol- |
|  1 |  1 |  P+ |  CH+ / Page+ |
|  2 |  2 |  P- |  CH- / Page- |
|  3 |  3 |  Up |  Up |
|  4 |  4 |  Down |  Down |
|  5 |  5 |  Right |  Right |
|  6 |  6 |  Left |  Left |
|  7 |  7 |  OK |  OK |
|  8 |  8 |  [G] |  Guide / EPG / -/-- |
|  9 |  9 |  i |  Info / Angle |
|  0 |  0 |  ← |  Back / Return |
|  Lang |  Audio / Lang I/II |  Exit |  Exit / Cancel / Clear |
|  [=]. |  Subtitle / EQ |  Menu |  Menu / Home |
|  Mute |  Mute / Dimmer |  Source |  AV / Input / RDS |
|  Home |  Shift + Menu / |  Text |  Text / Goto |
|  Smart |  Smart / List |  << |  << / Tune- |
|  Vol+ |  Vol+ |  Stop |  Stop / Hold |



