



 







 



 



 



 



 



 

 

 

 

 

 

 


 
 

 

 

 

 

 









 

 

 

 






 


 
 
 

 

 

 

 

 

 

 





Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 Source	 AV / Input / RDS	 Vol+	 Vol+
 P.Mode	 Setup / OPT /	 Mute	 Mute / Dimmer
 S.Mode	 Sound / Title	 P+	 CH+ / Page+
 Home	 Shift + Menu /	 I/II/Audio	 Audio / Lang I/II
 1	 1	 P-	 CH- / Page-
 2	 2	 Subtitle	 Subtitle / EQ
 3	 3	 3D World	 Display / Media
 4	 4	 Info	 Info / Angle
 5	 5	 FAV	 Fav / Marker / PC
 6	 6	 Screen	 Picture / Format
 7	 7	 CH List	 Smart / List
 8	 8	 Menu	 Menu / Home
 9	 9	 Up	 Up
 Q.View	 D.Menu / Top	 Guide	 Guide / EPG / -/-
 0	 0	 Left	 Left
 Sleep	 Sleep / Timer	 OK	 OK





Original	Replacement	Original	Replacement
	 Right		
	 Back / Return		
	 Down		
	 Exit / Cancel / Clear		
	 Red / Netflix / Search		
	 << / Tune-		
	 Green / APP / Repeat		
	 >> / Tune+		
	 Yellow / YouTube / Repeat		
	 I<< / Preset-		
	 Blue / Prime Video / Random		
	 >>I / Preset+		
	 Text / Goto		
	 Play / Slow		
	 Pause / Step / Freeze		
	 Stop / Hold		
	 Rec / Rec Mode		

