





























 












 










 











 
 
 








Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Fav / Marker / PC
	TV/R		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	EPG		Guide / EPG / -/-
	Up		Up
	CH+		CH+ / Page+
	Down		Down
	CH-		CH- / Page-
	Left		Left
	Vol-		Vol-
	Vol+		Vol+
	Right		Right
	OK		OK
	Info		Info / Angle
	Mute		Mute / Dimmer
	Text		Text / Goto
	Audio		Audio / Lang I/II
	Rec		Rec / Rec Mode
	Subtitle		Subtitle / EQ





Original		Replacement		Original	Replacement
	Pause		Pause / Step / Freeze		
	Back		Back / Return		
	Play		Play / Slow		
	Stop		Stop / Hold		

