



Original	Replacement
	 Power
	 AV
	 Smart
	 TV/R
	 Eject
	 Mute
	 Media
	 Sleep
	 Dual
	 Options
	 Subt
	 Pre Ch
	 Shift + Ch -
	 Shift + Ch +
	 Red
	 Green
	 Yellow

Original	Replacement
	 Blue
	 Menu
	 Exit
	 Info
	 Guide
	 Up
	 Down
	 Right
	 Left
	 Ok
	 Ch +
	 Ch -
	 Format
	 Shift + Dual
	 Vol +
	 Vol -
	 1





Original		Replacement		Original		Replacement	
	2		2		I<</Reveal		I<<
	3		3		>>I/Subpage		>>I
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Still		D. Menu				
	Recall		Back				
	Text		Text				
	Play		Play				
	Pause		Pause				
	<</Hold		<<				
	>>/Index		>>				
	Stop/Size		Stop				

