



Original	Replacement
	 Power
	 AV
	 Smart
	 TV/R
	 Eject
	 Mute
	 Media
	 Sleep
	 Dual
	 Options
	 Subt
	 Pre Ch
	 Shift + Ch -
	 Shift + Ch +
	 Red
	 Green
	 Yellow

Original	Replacement
	 Blue
	 Menu
	 Exit
	 Info
	 Guide
	 Up
	 Down
	 Right
	 Left
	 Ok
	 Ch +
	 Ch -
	 Format
	 Shift + Dual
	 Vol +
	 Vol -
	 1





Original	Replacement
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Still	D. Menu
Recall	Back
Text	Text
Play	Play
Pause	Pause
<</Hold	<<
>>/Index	>>
Stop/Size	Stop

Original	Replacement
I<</Reveal	I<<
>>/Subpage	>>I

