



Original	Replacement
	Power
	AV / Input / RDS
	SHIFT + Shift + 1
	SHIFT + Shift + Yellow / YouTube /
	SHIFT + Shift + Blue / Prime
	SHIFT + Shift + 4
	SHIFT + Shift + 5
	SHIFT + Shift + 6
	SHIFT + Shift + 7
	SHIFT + Shift + 8
	SHIFT + Shift + 3
	SHIFT + Shift + Red / Netflix /
	SHIFT + Shift + 2
	SHIFT + Shift + Green / APP /
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat

Original	Replacement
	Blue / Prime Video / Random
	D.Menu / Top
	Up
	Play / Slow
	Pause / Step / Freeze
	Left
	OK
	Right
	Back / Return
	Down
	Exit / Cancel / Clear
	Vol+
	Menu / Home
	CH+ / Page+
	Vol-
	Display / Media
	CH- / Page-



