 

 
 

 
 

 






 

 

 







 
 



 

 

 

 


 

 

 


 



 
 






Original	Replacement	Original	Replacement
 Power	 Power	 J/S.Mode	 Shift + Dual
 [i+]	 Info	 P.Mode	 Shift + Format
 DTT/TV	 TV/R	 Vol+	 Vol +
 Rec/AV1	 Rec	 Vol-	 Vol -
 Stop/AV2	 Stop	 I/II	 Dual
 Play/AV3	 Play	 Mute	 Mute
 AV4	 AV	 P+	 Ch +
 Pause/AV5	 Pause	 P-	 Ch -
 <</HDMI1/2	 <<	 1	 1
 >>/RGB	 >>	 2	 2
 Menu	 Menu	 3	 3
 Back	 Back	 4	 4
 Up	 Up	 5	 5
 Down	 Down	 6	 6
 Right	 Right	 7	 7
 Left	 Left	 8	 8
 OK	 Ok	 9	 9







 
 




 
 

 
 
 

 
 
 

 

 

 




Original		Replacement		Original		Replacement	
	0		0				
	[> <]/2-4-12		3D				
	[≡]		Options				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	[≡i]		List				
	[≡X]		Smart				
	[...]/Slide Show		Subt				
	[≡?]/Rotate		Pre Ch				
	[≡]/Text		Text				
	Swivel		Sleep				
	[<>]		Format				
	Photo		Media				

 

 


 









 
 







 

 


 


 
 








	Original	Replacement	Original	Replacement
	Power			
	OK			
	Up			
	Down			
	Right			
	Left			
	Menu			
	Play/AV3			
	Stop/AV2			
	Pause/AV5			
	<</HDMI 1/2			
	>>/RGB			
	P+			
	P-			





Original		Replacement		Original		Replacement	
	Power		Power		8		8
	OK		Ok		9		9
	Up		Up		0		0
	Down		Down				
	Right		Right				
	Left		Left				
	P+		Ch +				
	P-		Ch -				
	Vol+		Vol +				
	Vol-		Vol -				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				

