















































 



 



















Original		Replacement		Original		Replacement	
	Standby		Power		5		5
	DVD		Shift + 2		6		6
	Tuner		Shift + 6		Display		Display / Media
	AUX		Shift + 7		7		7
	Subtitle		Subtitle / EQ		8		8
	Language		Shift + Audio / Lang I/II		9		9
	Title		Sound / Title		NTSC/PAL		Picture / Format
	Return		Back / Return		+10		Guide / EPG / -/-
	Goto		Text / Goto		0		0
	Zoom		Zoom / Size		Sleep		Sleep / Timer
	Menu/PBC		Menu / Home		Mute		Mute / Dimmer
	Angle		Info / Angle		Setup		Setup / OPT /
	1		1		Open/Close		Eject / Surround
	2		2		Up		Up
	3		3		Left		Left
	Audio		Audio / Lang I/II		Enter		OK
	4		4		Right		Right



