












 

 

 









 







Original	Replacement
	Power
	Mute / Dimmer
	Shift + Picture / Format
	Sleep / Timer
	Text / Goto
	TV/Radio /
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Smart / List
	0

Original	Replacement
	Back / Return
	Vol-
	Vol+
	CH- / Page-
	CH+ / Page+
	Menu / Home
	Up
	Exit / Cancel / Clear
	Left
	OK
	Right
	Shift + CH- /
	Down
	Shift + CH+ /
	Fav / Marker / PC
	Guide / EPG / -/-
	Info / Angle





Original	Replacement
	 Display / Media
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Audio / Lang I/II
	 Blue / Prime Video / Random
	 Subtitle / EQ
	 Play / Slow
	 Stop / Hold
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 Shift + Text /
	 Shift + Pause / Step /
	 << / Tune-
	 >> / Tune+
	 Zoom / Size
	 Shift + Stop /

Hold

Original	Replacement
	 I<< / Preset-
	 >>I / Preset+
	 Shift + 0
	 Picture / Format
	 Setup / OPT /
	 Shift + Setup / OPT / Tools

