






 





 

 
 

 






| Original | Replacement | Original | Replacement |
|---|---------------|---|-----------------------------|
|  | Power |  | Power |
|  | |  | Picture / Format |
|  | Back |  | Back / Return |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Ok |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Stop |  | Stop / Hold |
|  | Smart Tv |  | Smart / List |
|  | Skip Prev. |  | I<< / Preset- |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | Skip Next |  | >>I / Preset+ |
| | Ch+ | | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Vol+ |  | Vol+ |
|  | Ch- |  | CH- / Page- |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue/00/Lang. |  | Blue / Prime Video / Random |
|  | Mute |  | Mute / Dimmer |
|  | Rec |  | Rec / Rec Mode |
|  | Source |  | AV / Input / RDS |
|  | Option |  | Setup / OPT / |
|  | Subt. |  | Subtitle / EQ |
|  | IPTV |  | Display / Media |
|  | Eco / Search |  | Fav / Marker / PC |
|  | Guide-Popup |  | Guide / EPG / -/- |
|  | Ch.List |  | Shift + Smart / List |
| | Info | | Info / Angle |





| Original | Replacement | | |
|---|-------------|---|-----------------------|
|  | Power |  | Power |
|  | (•J) |  | TV/Radio / |
|  | Back |  | Back / Return |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Ok |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Stop |  | Stop / Hold |
|  | Smart Tv |  | Smart / List |
|  | Skip Prev. |  | I<< / Preset- |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | Skip Next |  | >>I / Preset+ |
|  | Ch+ |  | CH+ / Page+ |

| Original | Replacement | | |
|---|---------------|---|-----------------------------|
|  | Vol- |  | Vol- |
|  | Vol+ |  | Vol+ |
|  | Ch- |  | CH- / Page- |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue/00/Lang. |  | Blue / Prime Video / Random |
|  | Mute |  | Mute / Dimmer |
|  | Rec |  | Rec / Rec Mode |
|  | Source |  | AV / Input / RDS |
|  | Option |  | Setup / OPT / |
|  | Subt. |  | Subtitle / EQ |
|  | Iptv |  | Display / Media |
|  | Eco/Search |  | Fav / Marker / PC |
|  | Guide/ Popup |  | Guide / EPG / -/- |
|  | Ch.List |  | Shift + Smart / List |
|  | Info |  | Info / Angle |



