

 
 
 
 

 







 

 

 

 

 

 

 

 

 






Original	Replacement	Original	Replacement
 Power	 Power	 16:9	16:9
 Sleep	 Sleep	 Lang	Lang
 Mute	 Mute	 RCL	RCL
 Timer	 AV	 FAV	FAV
 EPI	 Guide	 Page+ / Timeshift	Shift + Ch +
 SUBTL	 Subt	 Page- / V-Format	Shift + Ch -
 Audio	 Shift + Dual	 Page- / V-Format	Shift + Format
 1	 1	 Up / CH+	Up
 2	 2	 Up / CH+	Ch +
 3	 3	 Down / CH-	Down
 4	 4	 Down / CH-	Ch -
 5	 5	 Right / Vol+	Right
 6	 6	 Right / Vol+	Vol +
 7	 7	 Left / Vol-	Left
 8	 8	 Left / Vol-	Vol -
 9	 9	 OK	Ok
 0	 0	 Menu	Menu

Original	Replacement	Original	Replacement
 Format	Format	 TV	DVD
 Dual	Dual	 SAT	AUX
 Back	Back	 PLAY MODE	REC MODE
 Pre Ch	Pre Ch	 DISC NAV	SOUND
 Shift + Ch +	Shift + Ch +	 SOUND	AD
 Shift + Ch -	Shift + Ch -	 SETTINGS	OPT
 Shift + Format	Shift + Format	 LIST	DUAL
 Up	Up	 PROG	SEARCH
 Ch +	Ch +	 PICTURE	ECO
 Down	Down	 SLEEP	TV/R
 Ch -	Ch -	 FORMAT	3D
 Right	Right	 E-MANUAL	REPEAT
 Vol +	Vol +	 ZOOM	TIMER
 Left	Left	 D.MENU	TEXT
 Vol -	Vol -	 TOP MENU	INFO
 Ok	Ok	 OK	RETURN
 Menu	Menu	 EXIT	BACK





Original	Replacement
 Info	 Info
 TXT	 Text
 Exit	 Exit
 Red / SAT	 Red
 Green / Zoom	 Green
 Green / Zoom	 Eject
 Yellow / Pause	 Yellow
 Yellow / Pause	 Shift + Pause
 Blue / TV/Radio	 Blue
 Blue / TV/Radio	 TV/R
 <<	 <<
 >>	 >>
 Play / Pause	 Play
 Play / Pause	 Pause
 Stop	 Stop
 <<	 <<
 >>	 >>

Original	Replacement
 Slow	 Shift + Play
 Rec	 Rec
 Media	 Media
 Game	 Smart
 PVR	 Shift + Smart
 HDD	 Shift + Media

