











 



 














 






























 
















Original	Replacement	Original	Replacement
 Standby	 Power	 FAV	 Fav / Marker / PC
 Mute	 Mute / Dimmer	 Recall	 Back / Return
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 P.Mode	 Picture / Format	 Exit	 Exit / Cancel / Clear
 S.Mode	 Sound / Title	 Auto	 Smart / List
 Audio I/II	 Audio / Lang I/II	 Display	 Display / Media
 Sleep	 Sleep / Timer	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Vol-	 Vol-
 6	 6	 Vol+	 Vol+
 7	 7	 CH-	 CH- / Page-
 8	 8	 CH+	 CH+ / Page+
 9	 9	 Red	 Red / Netflix / Search
 0	 0	 Green	 Green / APP / Repeat









 

 

 
 





 

 

 







 

 



Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 Hold	 Shift + Stop /
 Repeat	 Shift + Green / APP /
 Subtitle	 Subtitle / EQ
 Index	 Info / Angle
 Size	 Zoom / Size
 << / Reveal	 << / Tune-
 >> / Subpage	 >> / Tune+
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Rec	 Rec / Rec Mode
 Timeshift	 D.Menu / Top

Original	Replacement
 EPG	 Guide / EPG / -/--
 Tv/Radio	 TV/Radio /





Original	Replacement
 Standby	 Power
 Mute	 Mute / Dimmer
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Audio I/II	 Audio / Lang I/II
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 Recall	 Back / Return
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Vol-	 Vol-
 Vol+	 Vol+
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random





Original	Replacement	Original	Replacement
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	Index		Info / Angle
	Size		Zoom / Size
	<<		<< / Tune-
	>>		>> / Tune+
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Rec		Rec / Rec Mode
	Timeshift		Smart / List
	EPG		Guide / EPG / -/--
	Tv/Radio		TV/Radio /

Original	Replacement	Original	Replacement

