












 





 



 








Original	Replacement	Original	Replacement
	Power		Mute / Dimmer
	Back		Down
	Setup / OPT /		Info / Angle
	Menu / Home		I<< / Preset-
	D.Menu / Top		>>I / Preset+
	Up		Text / Goto
	Play / Slow		AV / Input / RDS
	<< / Tune-		Subtitle / EQ
	>> / Tune+		Picture / Format
	Eject / Surround		Sound / Title
	Red / Netflix / Search		Blue / Prime Video / Random
	Left		
	OK		
	Right		
	Stop / Hold		
	Vol-		
	Vol+		

