

 

 

 

 

 

 

 

 





Original	Replacement
	Standby
	Power
	Auto
	Smart / List
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Back / Return
	Vol+
	Shift + Picture / Format

Original	Replacement
	Audio / Lang I/II
	CH+ / Page+
	Vol-
	Display / Media
	CH- / Page-
	Up
	Left
	OK
	Right
	Menu / Home
	Down
	Exit / Cancel / Clear
	AV / Input / RDS
	Picture / Format
	Sound / Title
	Sleep / Timer
	Fav / Marker / PC



[illegible]