

 
 
 



 

 


 

 








 
 

 
 
 
 




 

 





 

 
 
 

 

 


 

 




 








 









Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep
	Cancel		Shift + Back
	Repeat		Shift + Text
	Play Mode		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		0
	Disc 3		Yellow
	Disc 2		Green
	Disc 1		Red
	FM Mode/Mute		Menu
	L Balance		Text
	Balance R		AV
	Tape Direction		Exit
	Tape Display		Back
	SEA Mode		Subt
	S.A.Bass		Options
	Surround Mode		Dual
	Rec Pause		Rec
	Fade Muting		Mute
	Vol+		Vol +
	Vol-		Vol -
	Up/PTY Search		Up
	Play		Play
	Down/RDS Display Mode		Down
	Stop		Stop




 







 
 

 
 

 

 



 





 











 



 

 



 

 








 
 








Original	Replacement	Original	Replacement
 Right/PTY Select+	 Right		
 >> >>	 >>		
 Left/PTY Select-	 Left		
 <</<<	 <<		





Original	Replacement	Original	Replacement
 Power	 Power	 <</><<	 <<
 Sleep	 Sleep	 Rec Pause	 Rec
 1	 1	 S.A. Bass	 Options
 2	 2	 Surround Mode	 Dual
 3	 3	 Up/PTY Search	 Up
 4	 4	 Down/PTY Display Mode	 Down
 5	 5	 Right/PTY Select+	 Right
 6	 6	 Left/PTY Select-	 Left
 7	 7	 Vol-	 Vol -
 8	 8	 Vol+	 Vol +
 9	 9	 FM Mode/Mute	 Menu
 10	 0	 Tape Direction	 Exit
 +10	 GUIDE	 Tape Display	 Back
 Play	 Play	 L Balance	 Text
 Stop	 Stop	 Balance R	 AV
 Fade Muting	 Mute	 Play Mode	 Format
 >> >>	 >>	 Repeat	 Shift + Text





 
 






 
 



 

 












 




 

 



 

 










 
 

 



 

 


 
 


Original		Replacement	
	Cancel	 + 	Shift + Back
	SEA Mode		Subt
	Disc 1		Red
	Disc 2		Green
	Disc 3		Yellow

Original	Replacement

 

 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Surround Mode	 Dual
 1	 1	 S.A. Bass	 Options
 2	 2	 SEA Mode	 Subt
 3	 3	 Up/PTY Search	 Up
 4	 4	 Down/RDS Display Mode	 Down
 6	 6	 Right/PTY Select+	 Right
 5	 5	 left/PTY Select-	 Left
 7	 7	 Sleep	 Sleep
 8	 8	 FM Mode/Mute	 Menu
 9	 9	 Tape Direction	 Exit
 10	 0	 Tape Display	 Back
 +10	 GUIDE	 L Balance	 Text
 Vol+	 Vol +	 Balance R	 AV
 Vol-	 Vol -	 Play Mode	 Format
 Play	 Play	 Repeat	 Shift + Text
 Fade Muting	 Mute	 Cancel	 Shift + Back
 Stop	 Stop	 Disc 1	 Red

 


 
 
 



 

 



 






 




 










Original	Replacement	Original	Replacement
 Disc 2	 Green		
 Disc 3	 Yellow		




 







Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10	 0
 +10	 Guide
 Sleep	 Sleep
 Fade Muting	 Mute
 Play	 Play
 Stop	 Stop
 S.A. Bass	 Options

Original	Replacement
 Surround Mode	 Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Up/PTY Search	 Up
 Down/RDS Display Mode	 Down
 Right/PTY Select+	 Right
 Left/PTY Select-	 Left
 >> >>	 >>
 <</<<	 <<
 FM Mode/Mute	 Menu
 Tape Direction	 Exit
 Tape Display	 Back
 L Balance	 Text
 Balance R	 AV
 Play Mode	 Format
 Repeat	 Shift + Text
 Cancel	 Shift + Back





Original	Replacement	Original	Replacement
 SEA Mode	 Subt		
 Disc 1	 Red		
 Disc 2	 Green		
 Disc 3	 Yellow		

