































 



 



 


 



 


 

 







 



 



	Original	Replacement		Original	Replacement
	TV Mute	 Mute / Dimmer		Tv Vol+	 Vol+
	Output Select	 Smart / List		Tv Vol-	 Vol-
	Tv/Video	 AV / Input / RDS		PR/CH/Input	 CH+ / Page+
	Standby/On	 Power		PR/CH/Input	 CH- / Page-
	DV	 Text / Goto		Cancel	 Exit / Cancel / Clear
	HDD	 Shift + 7		Memo/Mark	 Eject / Surround
	DVD	 Shift + 2		F1	 Yellow / YouTube / Repeat
	1	 1		F2	 Blue / Prime Video / Random
	2	 2		Edit	 Sleep / Timer
	3	 3		Prog	 TV/Radio /
	4	 4		Top Menu	 D.Menu / Top
	5	 5		Up	 Up
	6	 6		Down	 Down
	7	 7		Right	 Right
	8	 8		Left	 Left
	9	 9		Enter	 OK
	0	 0		Navigation	 Green / APP / Repeat





Original	Replacement
 Menu	 Menu / Home
 Return	 Back / Return
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <</Slow-	 << / Tune-
 Play	 Play / Slow
 >>/Slow+	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Display	 Display / Media
 On Screen	 Info / Angle
 Recall	 Fav / Marker / PC
 →	 Sound / Title
 Rec	 Shift + Rec / Rec Mode
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ

Original	Replacement
 Angle/EE.Check	 Red / Netflix / Search
 EE	 Guide / EPG / -/-
 Dubbing	 Picture / Format
 Progressive Scan	 Zoom / Size
 Setup	 Setup / OPT /





Original		Replacement		Original		Replacement	
	Standby/On		Power		0		0
	Tv Mute		Mute / Dimmer		F1		Guide / EPG / -/-
	Prog		TV/Radio /				
	Tv/Video		AV / Input / RDS				
	Cancel		Exit / Cancel / Clear				
	Output Select		Smart / List				
	PR/CH+		CH+ / Page+				
	PR/CH-		CH- / Page-				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				

