












Original	Replacement
 Power	 Power
 Open/Close	 Eject / Surround
 Play/Pause CD	 Play / Slow
 Play/Pause USB	 Shift + Play /
 FM/AM Line	 TV/Radio /
 Set	 Setup / OPT /
 Display/QP Link	 Display / Media
 Cancel	 Exit / Cancel / Clear
 Clock/Timer	 Shift + Sleep / Timer
 PTY/Preset/Group Up	 Up
 PTY/Preset/Group Down	 Down
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 PTY Search	 Red / Netflix / Search
 Repeat/TA/News/I	 Green / APP / Repeat
 Mode/FM Play	 Smart / List

Original	Replacement
 Sleep/Auto	 Sleep / Timer
 Fade Muting	 Mute / Dimmer
 Bass/Tre/AHB Pro	 Audio / Lang I/II
 S.Turbo	 Shift + Smart / List
 Vol+	 Vol+
 Vol-	 Vol-

