





























 

 

 



 





 







 



 


















| Original | Replacement | Original | Replacement |
|--|--|---|--|
|  Open/Close |  Eject / Surround |  7 |  7 |
|  Standby Tv |  Shift + Power |  9 Tv |  Shift + 9 |
|  Standby |  Power |  8 |  8 |
|  1 Tv |  Shift + 1 |  9 |  9 |
|  2 Tv |  Shift + 2 |  0 Tv |  Shift + 0 |
|  2 |  2 |  0 |  0 |
|  3 Tv |  Shift + 3 |  -/-- Tv |  Guide / EPG / -/-- |
|  1 |  1 |  10 |  Shift + Guide / EPG / -/-- |
|  4 Tv |  Shift + 4 |  +10 |  Fav / Marker / PC |
|  3 |  3 |  Return |  Back / Return |
|  4 |  4 |  Page |  Setup / OPT / |
|  5 Tv |  Shift + 5 |  Title/Group |  Info / Angle |
|  5 |  5 |  Tv/Video |  Shift + TV/Radio / Program |
|  6 Tv |  Shift + 6 |  Cancel |  Exit / Cancel / Clear |
|  7 Tv |  Shift + 7 |  Top Menu |  D.Menu / Top |
|  6 |  6 |  Choice |  TV/Radio / |
|  8 Tv |  Shift + 8 |  Menu |  Menu / Home |





| Original | Replacement |
|--|---|
|  CH+ Tv |  Shift + CH+ / |
|  Up |  Up |
|  CH- Tv |  Shift + CH- / |
|  Vol- Tv |  Shift + Vol- |
|  Down |  Down |
|  Vol+ Tv |  Shift + Vol+ |
|  Right |  Right |
|  Enter |  OK |
|  Left |  Left |
|  I<</Previous |  I<< / Preset- |
|  On Screen |  Display / Media |
|  >>I/Next |  >>I / Preset+ |
|  Stop/Clear |  Stop / Hold |
|  Play/Select |  Play / Slow |
|  Pause/Strobe |  Pause / Step / Freeze |
|  <</Slow- |  << / Tune- |
|  >>/Slow+ |  >> / Tune+ |

| Original | Replacement |
|--|--|
|  Repeat |  Green / APP / Repeat |
|  Subtitle |  Subtitle / EQ |
|  Audio/fs/Rate |  Audio / Lang I/II |
|  VFP/Progressive Scan |  Picture / Format |
|  Digest |  AV / Input / RDS |
|  Angle |  Shift + Info / Angle |
|  Zoom- |  CH- / Page- |
|  Zoom+ |  CH+ / Page+ |
|  3D Phonic |  Zoom / Size |
|  PAL/NTSC |  Sleep / Timer |
|  Amp Vol- |  Vol- |
|  Amp Vol+ |  Vol+ |
|  Muting Tv |  Mute / Dimmer |

