



 

 

 

 

 



 



 

 

 

 

 
 
 



 



 

 

 

 

 





 

 

 

 



 







Original	Replacement
	 Power
	 Shift + 7
	 Shift + Mute / Dimmer
	 2
	 Setup / OPT /
	 3
	 Shift + Sleep / Timer
	 Shift + TV/Radio / Program
	 Sleep / Timer
	 1
	 Shift + Smart / List
	 Display / Media
	 CH- / Page-
	 CH+ / Page+
	 4
	 Red / Netflix / Search
	 5

Original	Replacement
	 6
	 7
	 8
	 9
	 0
	 Guide / EPG / -/--
	 Fav / Marker / PC
	 Back / Return
	 Zoom / Size
	 Exit / Cancel / Clear
	 Menu / Home
	 OK
	 Green / APP / Repeat
	 Smart / List
	 Pause / Step / Freeze
	 Play / Slow
	 TV/Radio /



