



Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 PP	 Back / Return
 I-II	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --	 Guide / EPG / -/--
 P<P	 Fav / Marker / PC
 Menu	 Menu / Home

Original	Replacement
 Info	 Info / Angle
 Left	 Left
 Up	 Up
 P+	 CH+ / Page+
 Right	 Right
 Down	 Down
 P-	 CH- / Page-
 Vol-	 Vol-
 Vol+	 Vol+
 Red/Sound	 Red / Netflix / Search
 Red/Sound	 Sound / Title
 Green/Picture	 Green / APP / Repeat
 Green/Picture	 Picture / Format
 Yellow/Feature	 Yellow / YouTube / Repeat
 Blue/Install	 Blue / Prime Video / Random
 TV	 TV/Radio /
 AV	 AV / Input / RDS





Original	Replacement
[≡]	<b>GOTO</b> <b>TEXT</b> Text / Goto
[ /≡]	<b>SHIFT</b> + <b>GOTO</b> <b>TEXT</b> Shift + Text /
[≡o]	<b>TIMER</b> <b>SLEEP</b> Sleep / Timer
[≡+]	<b>HOLD</b> Stop / Hold
[≡x]	<b>OPT-TOOLS</b> <b>SETUP</b> Setup / OPT /
[≡◆]	<b>SIZE</b> <b>ZOOM</b> Zoom / Size
[≡?]	<b>LIST</b> <b>SMART</b> Smart / List
[≡i]	<b>MEDIA</b> <b>DISPLAY</b> Display / Media

Original	Replacement

