




Original	Replacement
 Power	 Power
 Display	 Shift + Info
 Mute	 Mute
 Source	 Shift + AV
 Sleep	 Sleep
 Picture	 Shift + Format
 Sound	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 QV	 Pre Ch
 SUBTL	 Subt
 EPG	 Guide
 Page +	 Shift + Ch +
 Page -	 Shift + Ch -
 Info	 Info
 ATV Menu	 Shift + Menu
 DTV Menu	 Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 CH +	 Ch +
 CH -	 Ch -
 I/II / Exit	 Exit
 I/II / Exit	 Shift + Dual





Original	Replacement
Vol +	Vol +
Vol -	Vol -
Text	Text
Index	Smart
Cancel	Back
Size	Format
Mix	Shift + Text
SubPg	Shift + Subt
Reveal	Options
Hold	Stop
TV	Shift + TV/R
AV	AV
VGA	Media
DTV	TV/R
Red	Red
Green	Green
Yellow	Yellow

Original	Replacement
Blue	Blue

