




Original	Replacement
 Tuner	 Shift + 6
 Sleep	 Sleep / Timer
 Power Receiver	 Power
 Video	 Shift + 4
 DVD	 Shift + 2
 AUX	 Shift + 7
 Game/F.AUX	 Smart / List
 1	 1
 2	 2
 3	 3
 Input Mode	 AV / Input / RDS
 4	 4
 5	 5
 6	 6
 Setup	 Setup / OPT /
 7	 7
 8	 8

Original	Replacement
 9	 9
 Tone	 Shift + Audio / Lang I/II
 +10	 Guide / EPG / -/-
 0	 0
 Dimmer	 Shift + Mute / Dimmer
 Sound	 Sound / Title
 Listen Mode	 Display / Media
 Active EQ	 Shift + Display / Media
 Multi Control	 Down
 Multi Control Up	 Up
 Vol+	 Vol+
 Vol-	 Vol-
 Play/Pause/Ban	 Play / Slow
 Stop/Auto/Mono	 Stop / Hold
 Mute	 Mute / Dimmer
 I<< P.Call	 I<< / Preset-
 P.Call >>I	 >>I / Preset+





Original	Replacement
Power DVD	Power
1	1
2	2
3	3
4	4
5	5
6	6
Setup	Setup / OPT /
7	7
8	8
9	9
+10	Guide / EPG / -/-
0	0
Dimmer	Mute / Dimmer
Top Menu	D.Menu / Top
Up	Up
Menu	Menu / Home

Original	Replacement
Left	Left
Enter	OK
Right	Right
Down	Down
Return	Back / Return
On Screen	Display / Media
Pause	Pause / Step / Freeze
Play/Pause	Play / Slow
Stop	Stop / Hold
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
RDS Disp./Disc	AV / Input / RDS
PTY Disc Skip	Shift + D.Menu / Top Menu
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ





Original	Replacement
ANGLE	Info / Angle
REPEAT	Green / APP / Repeat

Original	Replacement

