






Original	Replacement	Original	Replacement
Power	Power	4	4
VIDEO	Red / Netflix / Search	5	5
Sleep	Sleep / Timer	6	6
Tuner Band	TV/Radio /	7	7
P.Call Down	Shift + Down	8	8
P.Call Up	Shift + Up	9	9
Changer CD 1	Shift + 1	0	0
Changer CD 2	Shift + 2	+10	Guide / EPG / -/-
Changer CD 3	Shift + 7	I<< / Preset-	I<< / Preset-
Changer CD 4	Shift + 4	>>I / Preset+	>>I / Preset+
Changer CD 5	Shift + 8	Stop	Stop / Hold
Changer CD 6	Shift + 9	Play/Pause	Play / Slow
P	OK	Repeat	Green / APP / Repeat
P.Open/Close	Eject / Surround	Clear	Exit / Cancel / Clear
1	1	Check	Shift + OK
2	2	Edit	Text / Goto
3	3	P.Mode	Picture / Format





Original	Replacement
 AI Auto Focus	 Info / Angle
 Up	 Up
Presence	 Setup / OPT /
 AI/Loudness	 Audio / Lang I/II
Left	 Left
EQ.Effect	 D.Menu / Top
Right	 Right
 Off	 Shift + Mute / Dimmer
 M.Call	 Back / Return
 Down	 Down
 Display	 Display / Media
 S.W.Power	 Shift + Power
 S.W.Effect	 Shift + D.Menu / Top Menu
 S.W.Vol-	 Shift + Vol-
 S.W.Vol+	 Shift + Vol+
 Mute	 Mute / Dimmer
 LD/AUX	 AV / Input / RDS

Original	Replacement
 Tape	 Shift + 5
 Tuner	 Shift + 6
 CD	 Shift + 3
 Volume Control -	 Vol-
 Volume Control +	 Vol+





















Original	Replacement	Original	Replacement
Power ON/Off	 Power		
Mute	 Mute / Dimmer		
CD Play	 Play / Slow		
CD Pause	 Pause / Step / Freeze		
Stop	 Stop / Hold		
CD Rewind	 << / Tune-		
CD F.FWD	 >> / Tune+		
Prev./Prog-	 << / Preset-		
Next/Prog+	 >> / Preset+		
Tape 2 Pre./eq	 Subtitle / EQ		
Fm Mode/Disc	 Eject / Surround		
Edit	 Zoom / Size		
Sleep	 Sleep / Timer		
Program	 TV/Radio /		
Every Pop	 D.Menu / Top		
Funct./Direct	 Setup / OPT /		
Woofers/Speed	 Text / Goto		

Original	Replacement	Original	Replacement
Input/Source	 AV / Input / RDS		
Mode	 Menu / Home		
Tape 1 Preset	 Up		
CD/Theater	 Info / Angle		
Tape 1 Hall/Ats	 Left		
Center	 OK		
Tape 2 REC./Jazz	 Right		
Clear	 Exit / Cancel / Clear		
Preset Pause	 Down		
Volume+	 Vol+		
Band	 Smart / List		
Vol Rs+/S.Mode	 CH+ / Page+		
Volume-	 Vol-		
Display	 Display / Media		
Vol Rs-/Effect	 CH- / Page-		
Pr 1	 1		
Pr 2	 2		





Original	Replacement	Original	Replacement
Pr 3	 3		
Pr 4	 4		
Pr 5	 5		
Pr 6	 6		
Pr 7	 7		
Pr 8	 8		
Pr 9	 9		
+10/Next Sv+V	 Guide / EPG / -/--		
Pr 0/10	 0		
Repeat	 Green / APP / Repeat		
CD Random	 Blue / Prime Video / Random		
Tape 1 Play	 Shift + Play /		
Tape 1 Stop	 Shift + Stop /		
Tape 1 Rec	 Shift + Rec / Rec Mode		
Tape 1 Rew	 Shift + << /		
Tape 1 F.FWD	 Shift + >> /		

