 


 


 

 

 
 
 



 


 

 









 






Original	Replacement
 Power	 Power
 Mute	 Mute
 Source	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Audio/I/II	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 Radio/+10	 Guide
 Recall/Program	 Back
 Tv Menu	 Menu
 Exit	 Exit
 Goto/Text	 Text
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK/Enter	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Red/DVD Setup	 Red
 Green/A-B	 Green





Original		Replacement		Original		Replacement	
	Yellow/Angle		Yellow		[ * ]		3D
	Blue/Repeat		Blue		T-Shift		TV/R
	Subtitle		Subt				
	Play		Play				
	Pause/Hold		Pause				
	Title/Size		Format				
	D.Dis/Reveal		Options				
	D.Menu/MIX		D. Menu				
	Zoom/Index	 + 	Shift + Eject				
	I<</FAV		I<<				
	>>I/Subpage		>>I				
	Stop/Language		Stop				
	<</FAV-		<<				
	>>/FAV+		>>				
	Eject/EPG		Eject				
	Media		Media				
	Rec		Rec				

