 

 

 

 

 

 



 

 



 

 
 


 

 

 



 

 



 



 

 





 

 

 



 











Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Clear	 Shift + Exit / Cancel / Clear
 0	 0
 Repeat/Tv/Radi	 Shift + Green / APP /
 I<<	 I<< / Preset-
 <<	 << / Tune-

Original	Replacement
 >>	 >> / Tune+
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause/Timeshift	 Pause / Step / Freeze
 Guide	 Guide / EPG / -/-
 PR+	 CH+ / Page+
 Rec	 Rec / Rec Mode
 PR List	 Smart / List
 PR-	 CH- / Page-
 Timer Rec	 Sleep / Timer
 Home	 Menu / Home
 Music ID	 Display / Media
 Info/Display	 Info / Angle
 Up	 Up
 Left	 Left
 Enter	 OK





Original	Replacement
Right	Right
Down	Down
Return	Back / Return
Title/Pop Up	Sound / Title
Disc Menu/Rec.	D.Menu / Top
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Marker	Fav / Marker / PC
Search	Shift + Red / Netflix /
Zoom	Zoom / Size
Text	Text / Goto
Subtitle	Subtitle / EQ
Exit	Exit / Cancel / Clear
Power Tv	Shift + Power
Vol+ Tv	Vol+

Original	Replacement
PR+ TV	Shift + CH+ /
AV/Input Tv	AV / Input / RDS
Vol- Tv	Vol-
PR- TV	Shift + CH- /

