



 





 





 









 



 

 

 



 



 



 





 



 

 



 

 







| Original  | Replacement  | Original  | Replacement   |
|---|--|---|---|
|  Power           |  Power            |  FAV/Mark    |  Fav / Marker / PC |
|  e/Energy Saving |  Shift + OK       |  Ratio       |  Picture / Format  |
|  AV Mode         |  Text / Goto      |  Mute/Delete |  Mute / Dimmer     |
|  Input           |  AV / Input / RDS |  Vol+        |  Vol+              |
|  TV              |  TV/Radio /       |  Vol-        |  Vol-              |
|  1               |  1                |  CH+         |  CH+ / Page+       |
|  2               |  2                |  CH-         |  CH- / Page-       |
|  3               |  3                |  Menu        |  Menu / Home       |
|  4               |  4                |  Netcast     |  Display / Media   |
|  5               |  5                |  Q.Menu      |  D.Menu / Top      |
|  6              |  6               |  Up         |  Up               |
|  7             |  7              |  Down      |  Down            |
|  8             |  8              |  Left      |  Left            |
|  9             |  9              |  Right     |  Right           |
|  0             |  0              |  Enter     |  OK              |
|  List          |  Smart / List   |  Back      |  Back / Return   |
|  Q.View        |  Setup / OPT /  |  Simplink  |  Zoom / Size     |





|   | Original | Replacement   | Original | Replacement |
|---|----------|---|----------|-------------|
|  | Exit     |  Exit / Cancel / Clear       |          |             |
|  | Red      |  Red / Netflix / Search      |          |             |
|  | Green    |  Green / APP / Repeat        |          |             |
|  | Yellow   |  Yellow / YouTube / Repeat   |          |             |
|  | Blue     |  Blue / Prime Video / Random |          |             |
|  | Stop     |  Stop / Hold                 |          |             |
|  | Play     |  Play / Slow                 |          |             |
|  | Pause    |  Pause / Step / Freeze       |          |             |
|  | <<       |  << / Tune-                  |          |             |
|  | >>       |  >> / Tune+                  |          |             |
|   |          |   |          |             |
|   |          |   |          |             |
|   |          |   |          |             |
|   |          |   |          |             |
|   |          |   |          |             |
|   |          |   |          |             |
|   |          |   |          |             |
|   |          |   |          |             |
|   |          |   |          |             |
|   |          |   |          |             |
|   |          |   |          |             |
|   |          |   |          |             |
|   |          |   |          |             |
|   |          |   |          |             |
|   |          |   |          |             |
|   |          |   |          |             |

