



 



 



 



 











 

 





 



 

 





 



 

 

 





 

 







| Original | Replacement | Original | Replacement |
|---|--|--|---|
|  Power |  Power |  Vol+ |  Vol+ |
|  Energy Saving |  Eject / Surround |  FAV/Mark |  Fav / Marker / PC |
|  AV Mode |  Picture / Format |  P+ |  CH+ / Page+ |
|  Input |  AV / Input / RDS |  Vol- |  Vol- |
|  Tv/Rad |  TV/Radio / |  Ratio |  Display / Media |
|  1 |  1 |  P- |  CH- / Page- |
|  2 |  2 |  Mute |  Mute / Dimmer |
|  3 |  3 |  Menu |  Menu / Home |
|  4 |  4 |  Guide |  Guide / EPG / -/- |
|  5 |  5 |  Q.Menu |  D.Menu / Top |
|  6 |  6 |  Up |  Up |
|  7 |  7 |  Left |  Left |
|  8 |  8 |  OK |  OK |
|  9 |  9 |  Right |  Right |
|  List |  Smart / List |  Down |  Down |
|  0 |  0 |  Back |  Back / Return |
|  Q.View |  Setup / OPT / |  Info |  Info / Angle |





| Original | Replacement | Original | Replacement |
|---|--------------|---|-----------------------------|
|  | Exit |  | Exit / Cancel / Clear |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | Text |  | Text / Goto |
|  | T.Opt |  +  | Shift + Setup / OPT / Tools |
|  | Subtitle |  | Subtitle / EQ |
|  | Stop |  | Stop / Hold |
|  | Play |  | Play / Slow |
|  | Pause/Freeze |  | Pause / Step / Freeze |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | Simplink |  | Sound / Title |
|  | AD |  | Audio / Lang I/II |
| | | | |
| | | | |

